 


**COMFORT HEAT**

**Infrared heating unit**

**SUNPOWER 350 W**

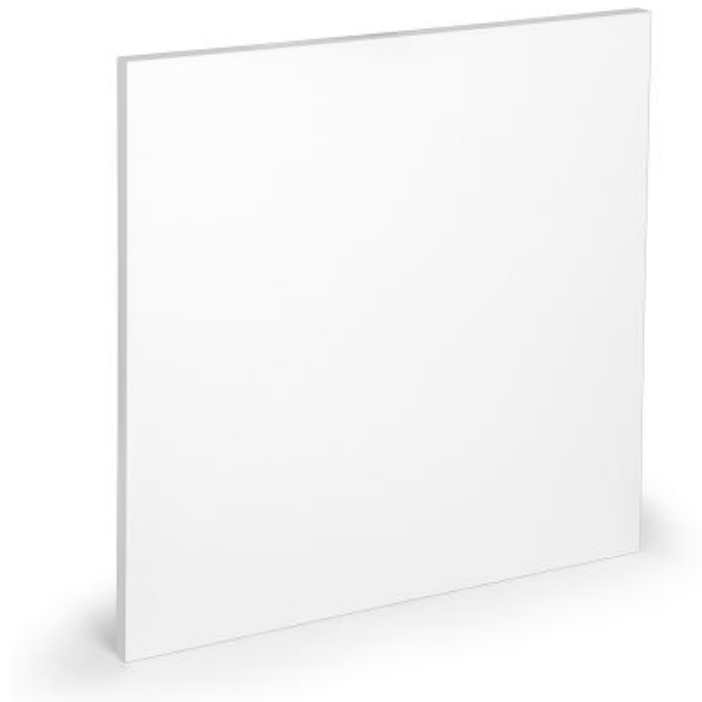

## USER MANUAL FOR INFRARED HEATING UNIT

### Dear Customer

Congratulations on the purchase of the heating unit– environmentally-friendly and economical in energy consumption. Please apply these guidelines for safe and economical use of the unit.

### Guidelines to observe during operation

 
This equipment is the radiant heating element and does not operate on the basis of convection principle. Usually several minutes after starting, you receive pleasant warmth. During the first start-up it may be necessary to warm up first all cold surfaces (furniture, walls, ceiling and floor). The equipment must be left working for several hours, and in extreme cases also for several days, to the moment of creating the pleasant sensation of warmth within the room. On heating the solid object, the warmth shall spread over the whole room, and then it is possible to reduce the operation time of the equipment to the necessary minimum.

### Before the first switching-on

Please read the whole manual and safety instructions. Also, check the conformity of the grid voltage with the voltage indicated on the rating plate (rear part of the equipment).

### Start-up

The equipment must be fixed to the wall or the ceiling, using the mounting brackets in the set, and then the heating unit must be fitted to the prepared & mounted structure. Mounting brackets must be fitted to the wall or the ceiling using screws or bolts.

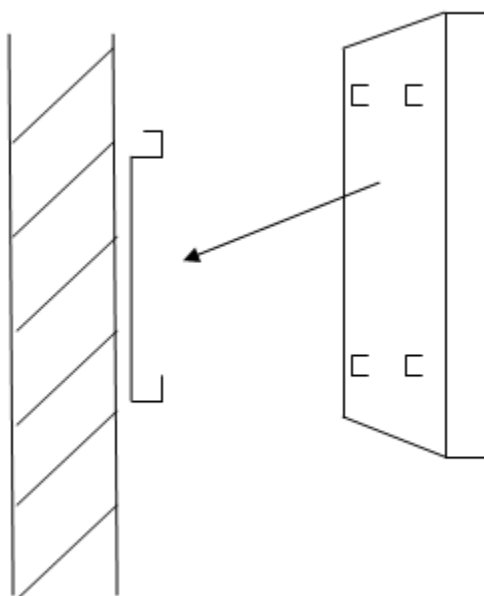

## Cleaning and maintenance

The unit is heating up during operation, reaching high temperature, so before cleaning the unit must be switched off. Also, the unit must be left for the time of cooling down completely. For cleaning purposes use the soft cloth with small amount of washing liquid. Neither the equipment nor electric wires can be cleaned with running water or immersed in the water. Do not use sharp tools for scrubbing.

## Warning- temperature setting

The panel is equipped with temperature control device for monitoring ambient temperature. Do not use the panel in small rooms occupied by people unable to leave the room without assistance, unless they are supervised.

 
## Do not cover the unit

Due to high operation temperature do not cover the unit.




## Safety instructions for fixing and operation of heating unit

- ❖ Do not fix the unit directly under the socket.
- ❖ Due to the application and protection degree the unit shall be connected to sockets with pin.
- ❖ Do not install the unit in the proximity of the bath-tube, shower or sink.
- ❖ Connect only to the 230V AC inlet.
- ❖ Do not immerse the unit in the water.
- ❖ Do not place any objects on the unit and do not cover it- danger of overheating exists.
- ❖ At all times it is necessary to provide access for and possibility to switch the unit off using switch or thermostat.
- ❖ In case of direct connection, connect the unit to the junction box.
- ❖ Minimum distance from other objects must be 50 cm in the front, 50 cm laterally and 10 cm from the top.

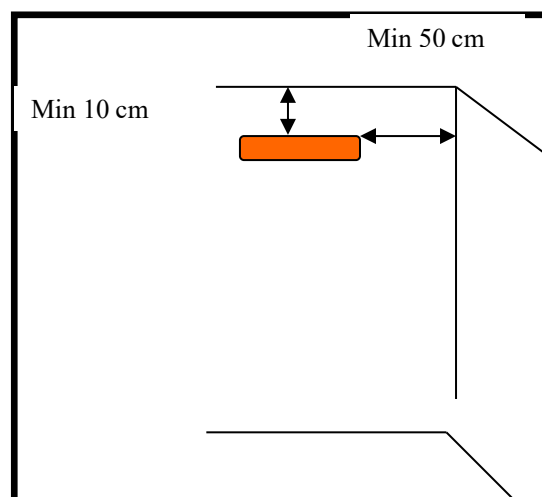

 - ❖ Minimum distance from ceiling in case of mounting on the ceiling shall be 20 cm

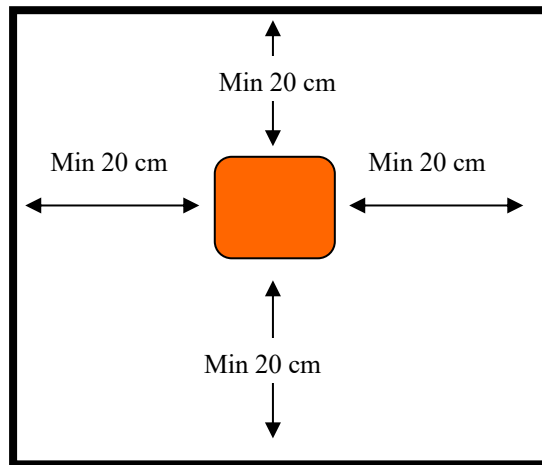

- ❖ Do not damage the surface of the unit.
- ❖ For fixing, use only the brackets provided.
- ❖ Children do not recognize dangers connected with electrical equipment operation. As a result, do not leave children unattended in the proximity of electrical equipment. In case of small children, the unit should be placed in a location completely inaccessible for them.
- ❖ **Do not perform any repairs yourself. The cable cannot be replaced by user. You must deliver the equipment to the supplier each time for repair works performance.**
- ❖ **Fixing heating units in humid spaces can only take place using water-tight connectors and can be performed exclusively by authorized specialists or/and electrician.**

#### **Member resistance**

Due to the weight of the unit (5 kg), one must make sure if the member resistance for mounting of the panel shall bear the load of 10 kg.

#### **Electrical connection**

On fixing the unit, it should be connected to 230V AC inlet directly or using the temperature controller. This operation must be performed by a qualified electrician.

#### **Guarantee**

We provide 120-month long guarantee for this equipment, counted since the date of issue of the respective bill of sale. It is necessary to present the bill of sale, possible the bill of landing. During warranty period all material defects and production errors shall be removed free of charge. The removal shall take place via repair or replacement of faulty components

or, upon the manufacturer's decision, the replacement of the whole unit into the item free from defects.

In order to benefit from the guarantee, you must operate and maintain the product in accordance with the instruction manual. All and any claims exceeding the scope of this guarantee are excluded. In justified cases the guarantee includes only the repair work of the unit. Further claims and liability for defects are excluded. The guarantee does not include components subject to standard wear and tear, as well as defects resulting from improper use of the equipment, humidity in the room or defects resulting from actions and activities of the third parties.

**In case of complaints, the unit must be sent to the supplier:**

- ❖ **with the bill of sale or the bill of landing or with the statement of unit collection,**
- ❖ **with detailed description of the defect,**
- ❖ **properly packed- for these purposes please keep the original packaging in a safe place.**

Thank you for reading this instruction manual!

**Technical data:**

Model: SUNPOWER 350 W

Voltage: 230 V

Protection class: IP44

Protection class: 1

Power: 350 W

Dimensions: 59.2 x 59.2 x 3 cm

Weight: 5 kg

Surface temperature: 105°C

**Name and address of the distributor:**

**2 ACTIVE SP. Z O.O.**

**UL. JANA BRZECHWY 4**

**59-220 LEGNICA**

**[www.comfortheat24.com](http://www.comfortheat24.com)**